


Operator's Manual

MODEL WSP-BT200

(Kiosk&Ticket Printer)

Rev. 3.1

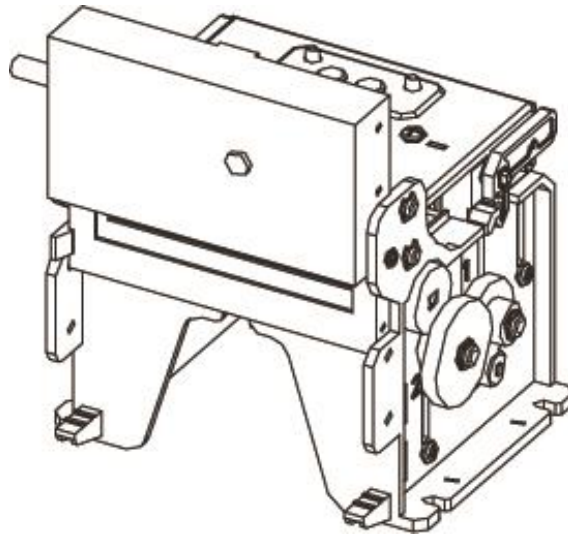

All specifications are subjected to change without notice

▣ Copyright

WSP-BT200 2inch Kiosk/Ticket printer operator's manual.

Copyright ©2018 by Woosim Systems Inc.

All rights reserved.

The information contained in this manual is the property of Woosim Systems Inc.

And may not be reproduced in whole or in part without the prior written permission of Woosim Systems Inc.

▣ Trademark



a registered trademark of Woosim Systems Inc.

All other trademark are the properties of their respective companies.

▣ Caution

Some semiconductor devices are easily damaged by static electricity. You should turn the printer "OFF", before you connect or removed the cable on the rear side, in order to guard the printer against the static electricity.

If the printer is damaged by the static electricity, you should turn the printer "OFF".

▣ Notice

The contents of this manual are subject to change without notice.

■ Introduction

150mm/sec high-speed printer. The 2inch thermal panel printer is most suitable for ticketing applications, such as transportation, coupons, industrial machine, lottery, ATM and kiosks.

The general features of **WSP-BT200** printer are as follows:

- ▶ Very silent printing thru direct thermal printing method.
- ▶ High speed(150mm/sec, MAX)
- ▶ High resolution(203dpi : 8dots/mm).
- ▶ UART(RS-232C or TTL) Interface
- ▶ Low power consumption.
- ▶ Auto cutting.
- ▶ Supports text and graphic printing.
- ▶ Printer door open & Paper-out sensor
- ▶ Easy paper handling
- ▶ Easier paper roll loading by CLAMSHELL design.
- ▶ Easier maintenance with self-diagnostics.
- ▶ In field programming – Update Firmware, Download Fonts and Logos
- ▶ Microsoft Windows/Windows CE, Linux, Android compatible
- ▶ Flow control : Software (XON/XOFF)
 - ※ Hardware flow control not supported in printer.

■ Operating Precautions

Please follow the precautions below to enjoy and maintain the full performance of the printer.

▶ Using the Printer

- Be careful not to drop or bump the printer on a hard surface.
- Do not install the printer in direct sunlight or such areas.

Suitable environment for the use of the printer is as follows:

- ◆ Operating temperature: -10°C to 50°C
- ◆ Relative humidity : 30% to 80%
- Do not install the printer near devices that generate strong electromagnetic fields such as a copy machine.
- Do not open the platen cover during printing .
- Do not remove or reinstall the communication cable during printing or transmission.
- Do not touch the connectors of the communication during printing.
- POWER OFF when not in use.
- Do not use other solvent.

▶ Thermal Paper Handling


- Store the thermal paper in a cool, dry and dark place.
- Do not rub the paper with hard object.
- Do not leave the paper with hard object.
- Do not allow plastic film, erasers, or adhesive tape to touch the paper for long periods.
- Do not stack the thermal paper with diazo copies immediately after copying or wet-type copies.
- Do not use chemical glue.
- Always use the clean thermal paper.

CONTENTS

- 1. Outline 6**
 - 1.1. Model classifications 6
 - 1.2. Product Part Number System 6
 - 1.3. Specifications 7
- 2. Setting up the printer 8**
 - 2.1. Printer & Accessories 8
 - 2.2. Printer Features 9
 - 2.3. Dimensions 10
 - 2.4. Replacing the paper roll 11
 - 2.5. Power Supply 12
 - 2.5.1. Specified Power supply 12
 - 2.5.2. Power connector 12
 - 2.6. Sensor 13
- 3. Interface 14**
 - 3.1. UART (RS-232C or TTL) 14
- 4. Using the printer 15**
 - 4.1. Control panel 15
 - 4.2. The self test 15
- 5. Consumable Parts 16**
 - 5.1. Recommended paper 16
 - 5.2. Printing position 16
- 6. Revision History 17**

1. Outline

1.1. Model classifications

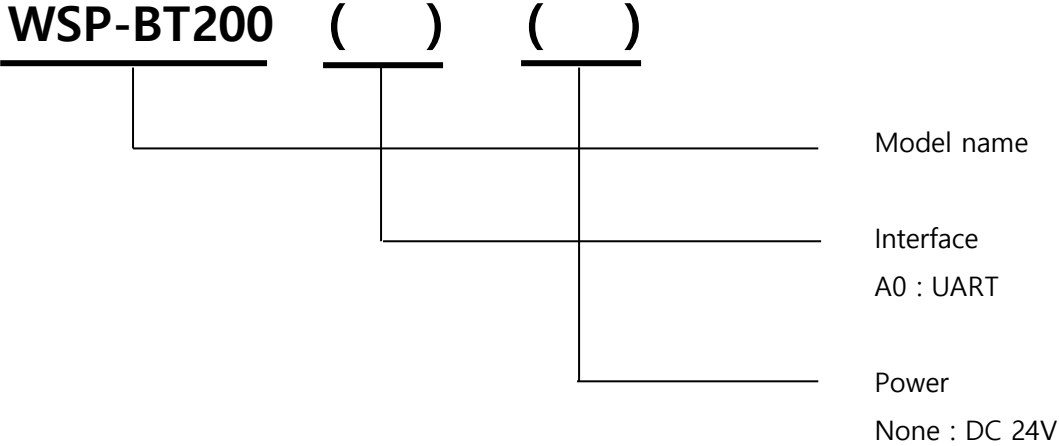

1.2. Product Part Number System

Model name / Interface Spec.

↓

S40
SC30
W25
·
·
·

Wired		Wireless	
A	RS-232C	1	Bluetooth
B	TTL	2	IrDA
C	USB	0	None
D	RS-485		
E	Parallel		
Z	None		

Example) 1. Porti-S40 Serial/Bluetooth Part No. ⇒ S40/A1
 2. Porti-SC30 Bluetooth Only Part No. ⇒ SC30/Z1

Note) The above table is the interface format which is supported.
 But some of the interfaces are not supported according to the product and please contact us, if you have any questions regarding the interface.

1.3. Specifications


Item	Specification	
Print method	Direct thermal line printing	
Character size	- Font Size A: 12X24 / Font Size B : 9X24 / Font Size C : 8X16 - KOR : 24X24(16X24) / CHN, JPN : 24X24	
Characters per line	- 49cpl (MAX) - KOR, CHN, JPN : 16cpl	
Optional Characters	Alphanumeric:95, Extended Graphics:128X31 pages, International:10, Simplified/Traditional Chinese, Japanese, Korean	
Resolution	203dpi, 8dots/mm	
Print width	2-inch (56mm, 448dots)	
Paper supplied	60 - 0.5 mm wide (Thermal roll paper) Paper thickness : 60±5 μm	
Printing speed	150mm/sec (MAX)	
Dimensions	99.8 X 87.1 X 86.3 (111.5) mm	
Weight (w/o paper)	533g	
Interface	UART (RS-232C or TTL)	
Barcodes	1-dimension : Code128, Code39, I2/5, Code93, UPC-A, UPC-E, EAN8, EAN13, CODABAR 2-dimension : PDF417, QR Code, DATA Matrix, Micro PDF417, Truncated PDF417	
Black mark	Support black mark detection	
Driver	Microsoft Windows, Linux	
H/W spec	MCU : 32bits RISC, FLASH : 4Mbytes, RAM : 8Mbytes	
Receive buffer size	1M bytes	
Input Power	24VDC, 3A(RMS current) [According to the power supplying condition which is sent to a printer, inrush current would occur.]	
Environment conditions	Temperature	-10 °C ~ 50°C (operating) -10°C ~ 70°C (storage)
	Humidity	30% - 80% (operating) 10% - 90% (storage)
MCBF (Mean Cycle Between failure)	Mechanical	37,000,000 lines
	Head	Approximately 50 Km

<Table 1 >

2. Setting up the printer



2.1. Printer & Accessories

When unpacking your printer box make sure it contains the printer and all accessories.
If any accessories are missing or damage, please contact your dealer for assistance.

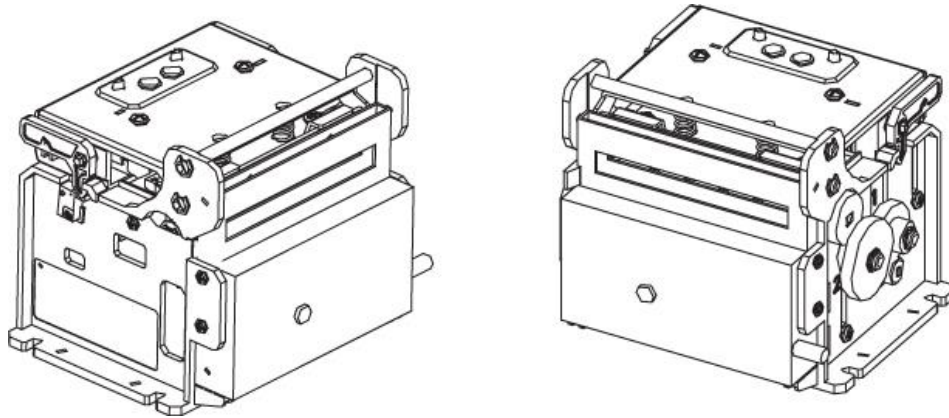


WSP-BT200


2.2. Printer Features

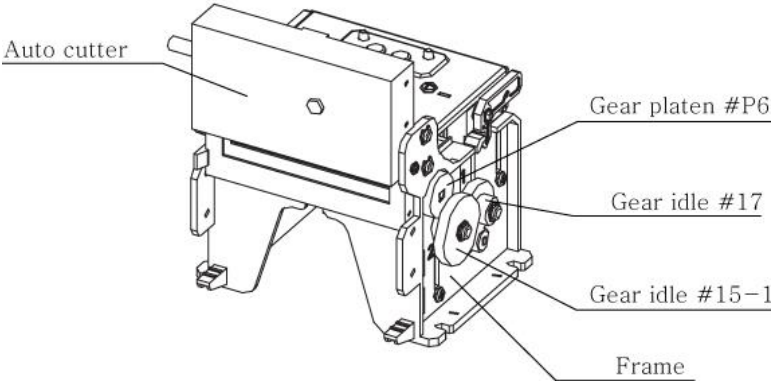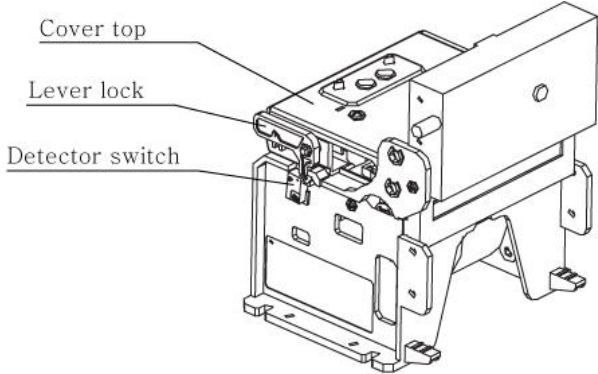

Connecting Ground Cable to Ground(0V) or to the land, if Ground Cable is not correctly connected, it will cause malfunctioning or the

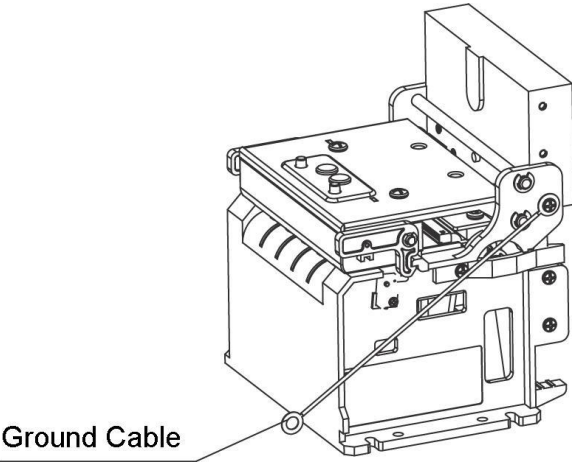

2.3. Dimensions

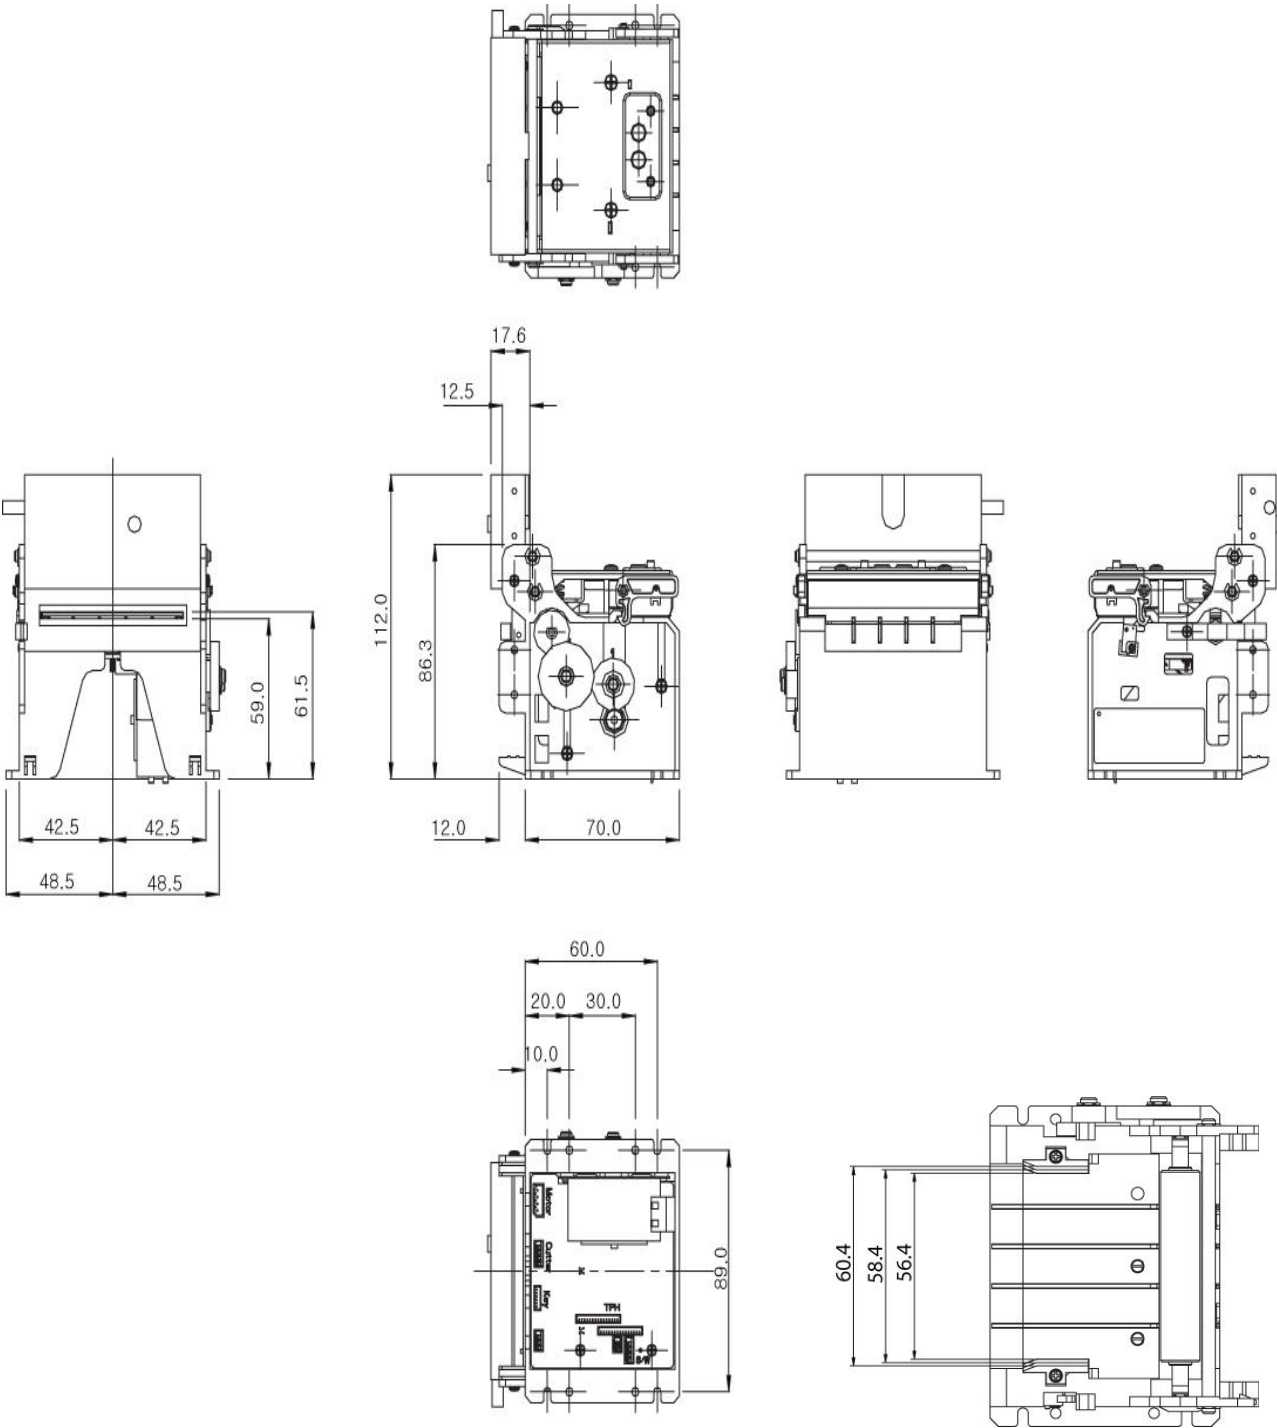


2.4. Replacing the paper roll

Note : Be sure to use paper rolls that meet the specifications.

Do not use paper rolls that have the paper glued to the core because the printer can not detect the paper end correctly.

1. Make sure that the printer is not receiving data; otherwise, data may be lost.
2. Remove the used paper roll core if there is one.
3. Insert the paper roll as shown.

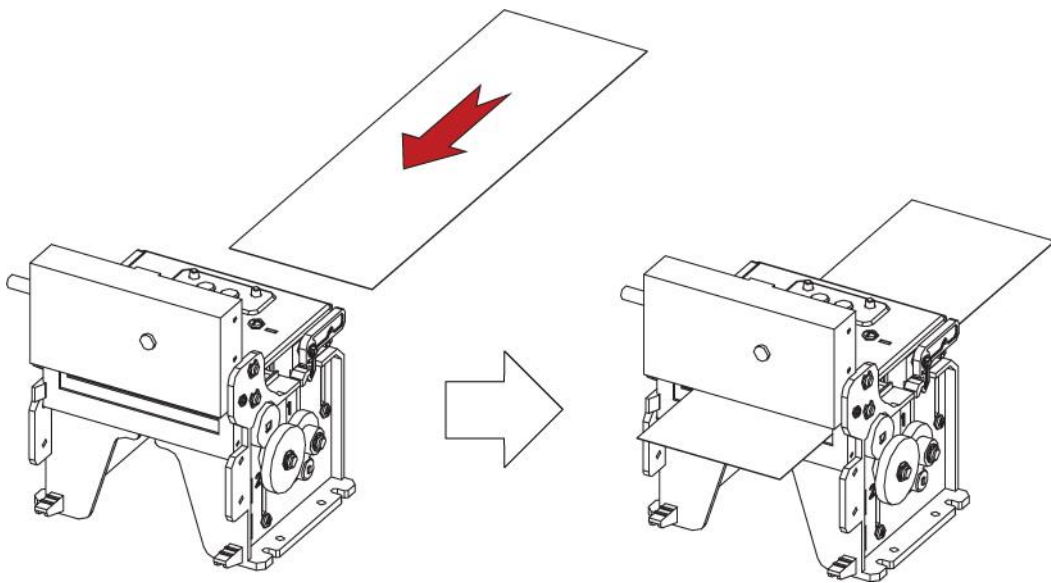

2.5. Power Supply

2.5.1. Specified Power supply

The following specifications are requested for Power supply.


INPUT POWER : 24VDC, 3A(RMS current)

- * According to the power supplying condition which is sent to a printer, inrush current would occur.
- * Avoid using power supply which its power capacity of power current is extremely high.

2.5.2. Power connector

The WSP-T280 printer is equipped to an external supply electrical power.

The functions assigned to the pins in the connector are as follows:

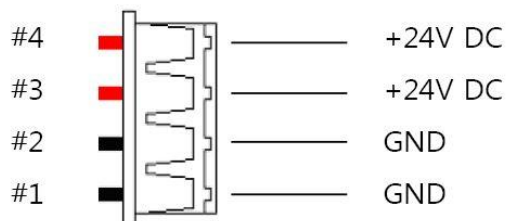


WARNING

A wrong connection of power supply connector could be damage the

Applicable connector : MOLEX 53014-0410 or equivalent.

2.6. Sensor

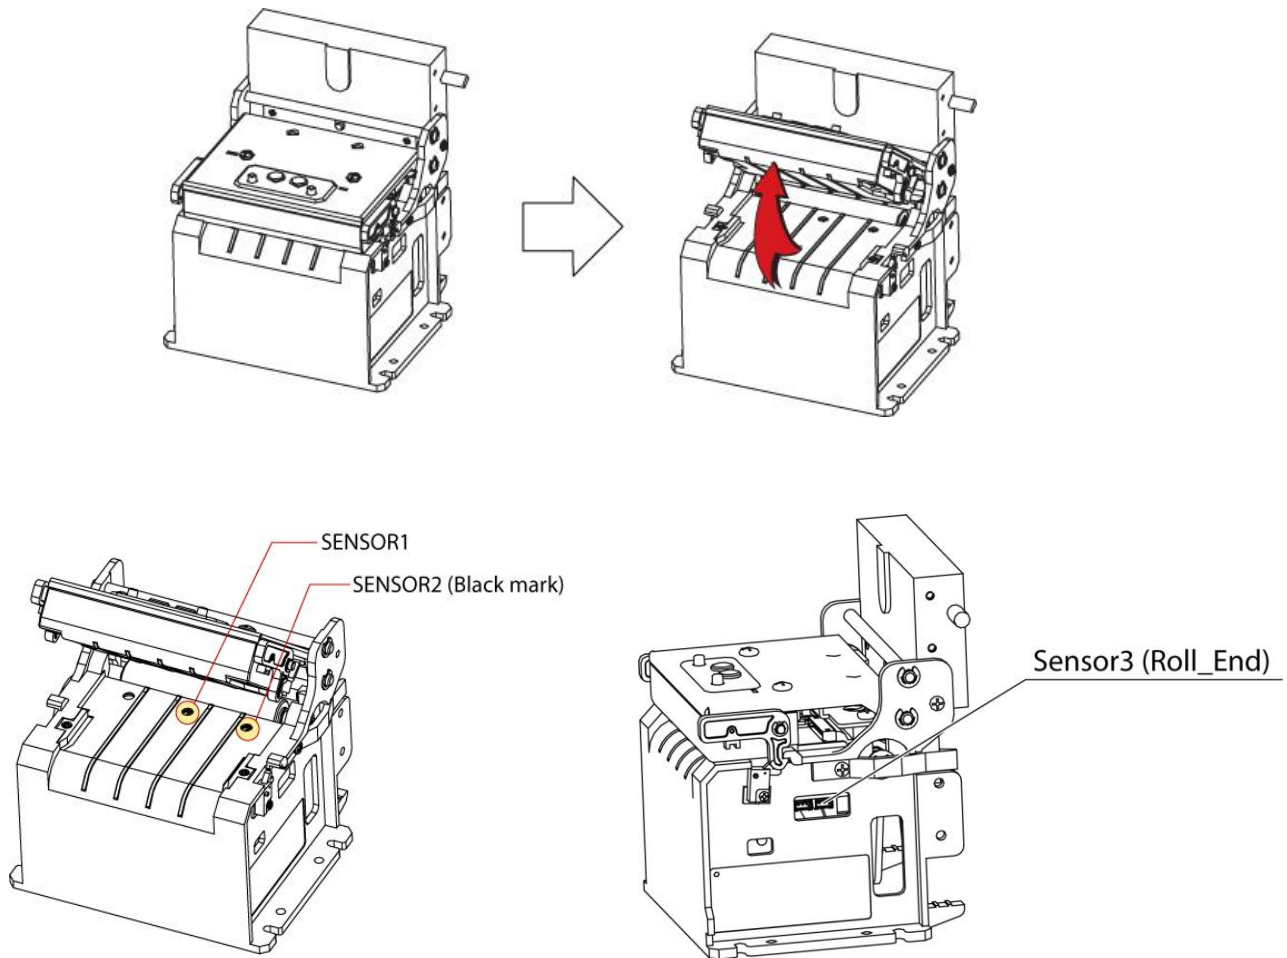

① Sensor 1 : Paper Out Sensor

When using the general thermal paper, the sensor which detects the exhaust presence of the paper.

② Sensor 2 : Black Mark Sensor

When using label paper etc., is detected with the black mark sensor.

③ Sensor 3 : Roll-End Sensor


Detects the remainder condition of the paper.

3. Interface

3.1. UART (RS-232C or TTL)

The WSP-BT200 printer has a UART(RS-232C or TTL) interface and is connected by means of a 3pin male connector.

In the following table, the signals present on the connector are listed:

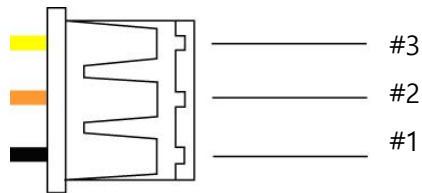


Pin No	Name	Direction	Function
3	TxD	Output	Transmit Data
2	RxD	Input	Receive Data
1	GND	-	Ground

<Molex : 51004-03P>

Applicable connector : MOLEX 53014-03P or equivalent.

4. Using the printer

4.1. Control panel

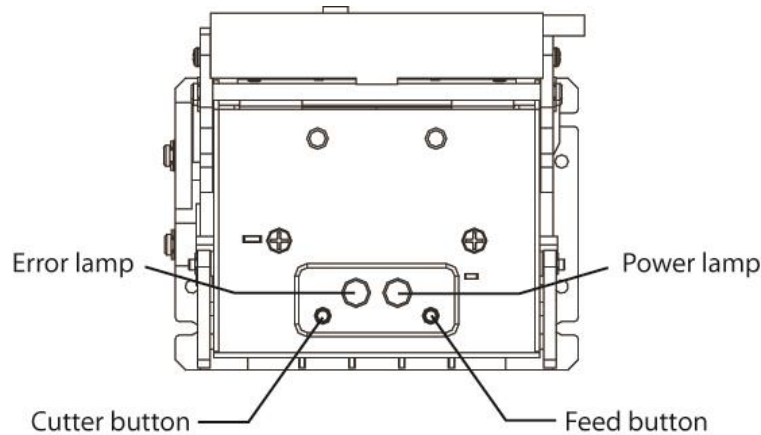

► Button

- FEED Button :

When the printer is on, paper can be feed manually by pressing and holding the FEED button for more than one second.

- CUTTER Button :

Cutter Button is used when once cutting the paper.

► LAMP

- **POWER lamp(GREEN)** : Printer is ON and ready to receive data.

- **ERROR lamp(RED)** : Indicated a fault condition or a printer error.
(details: no paper, paper cover opened. etc.)

4.2. The self test

Self-Test prints out the current setting value of printer. The way of self-test is as follows.

1. Insert proper paper into the printer.
2. Power on while pressing feed button to start self-test.
3. Printer will print out the current status. (F/W version and set contents)
4. And then pattern of characters will be printed out.
5. Self-test will be finished automatically and turned to the standby status.

※ In case printer does not work properly, please contact Woosim customer service center.

5. Consumable Parts

5.1. Recommended paper


Type	: Thermal Paper
Paper width	: 60mm
Paper thickness	: $60\pm 5\mu\text{m}$
Recording side	: Outside of roll



Cautions

1. Do not paste the paper to the core. And the roll paper which has near end mark printing on its near end is recommended.
2. Chemicals or oil may change the color of paper, or printed characters may fade.
3. Change of paper color starts from approx. 70°C.
Pay attention to heat, humidity and sun light.
4. Color of paper may be changed by being scratched by nail or hard metal, etc.

5.2. Printing position

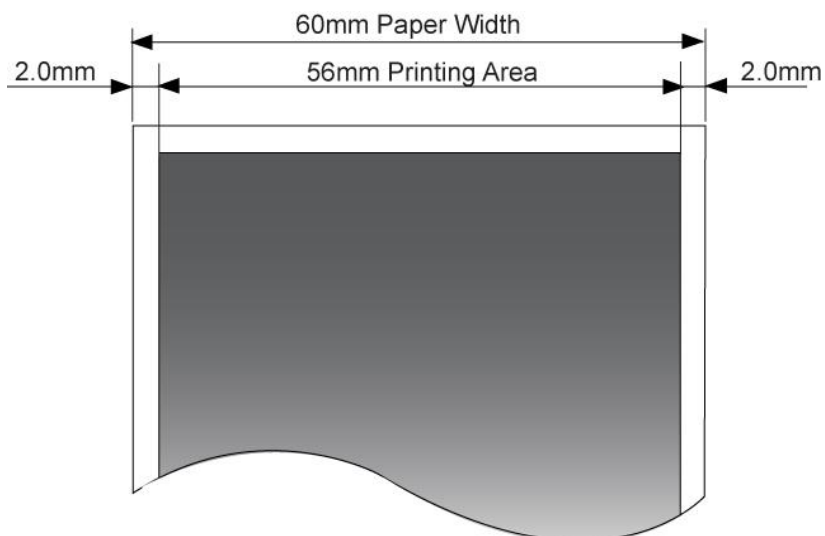

6. Revision History

Date	Version	Comments
Aug. 23. 2018	3.1	Renewal (B5->A4)